SD-WAN HSEC License Install

Obtain chassis and serial numbers from the routers:

TSN1#sh sdwan certificate serial


Chassis number: C1121-8PLTEPWB-FGL231312MJ Board ID serial

number: 018A88F3 Subject S/N: FGL231312MJ


Once you have chassis and serial numbers:

- Log in to your Smart Account and select the appropriate Virtual Account (fbi-dcap)
- Select the Product Instances tab
- Click on the Authorize License-Enforced Features:


SD-WAN HSEC License Install

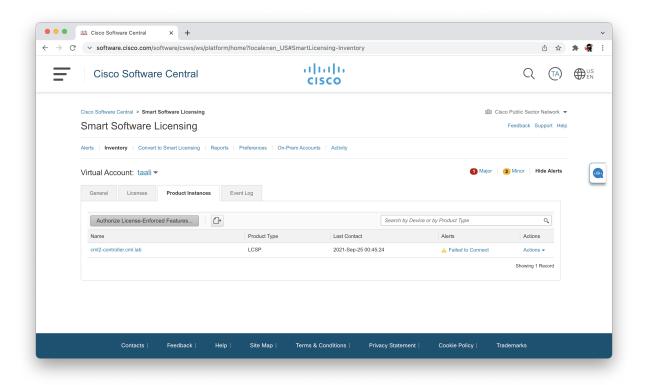


• Select Multiple Devices from the drop down list and click on Download a template:

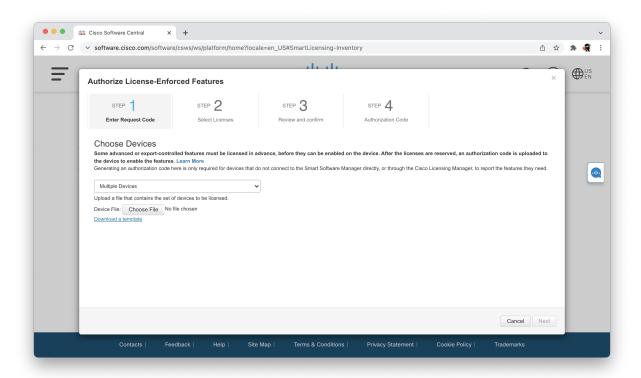


• Enter the Chassis Numbers in the PID column and Serial Numbers in the Serial Number column of the template file:

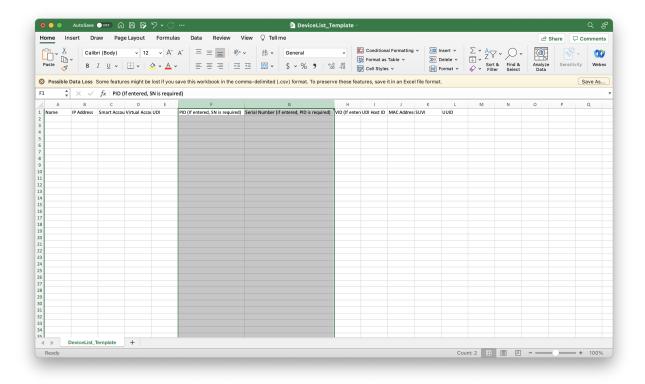


• Upload this file by clicking Choose File and selecting Next:

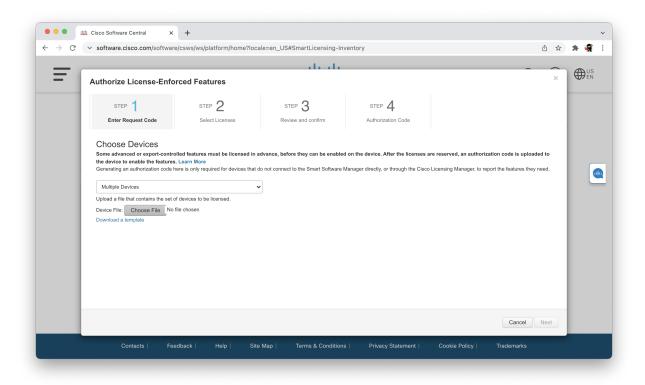

• Select the HSEC licenses for your Cat8Ks and click Next:

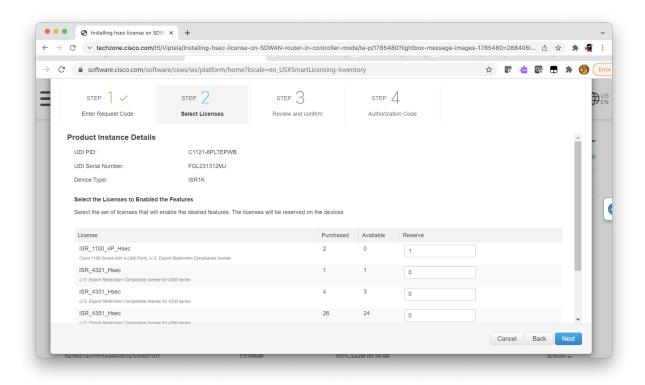

• In Step 4 click Download as File and save the license:

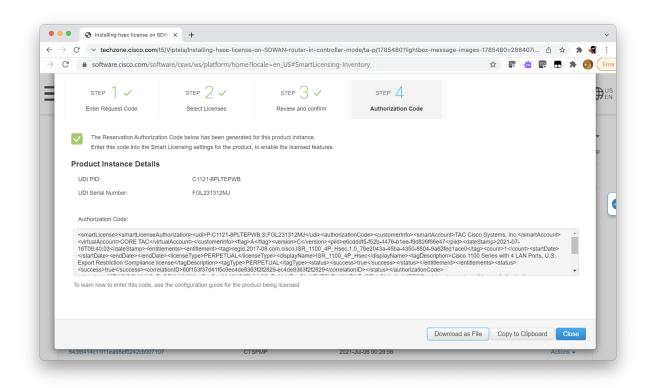

• Copy the file to TFTP and install the licenses:

```
TSN1# copy tftp: bootflash:

Address or name of remote host []? 10.76.76.160

Source filename []? auth.r txt

Destination filename [auth.txt]?

Accessing tftp://10.76.76.160/auth.txt...

Loading auth.txt from 10.76.76.160 (via Vlan1): !

[OK - 1578 bytes]

1578 bytes copied in 0.032 secs (49313 bytes/sec)
```

TSN1#license smart import bootflash:auth.txt

TSN1#sh license summary

License Usage:

License Status	Entitlement Tag	Count
ISR_1100_4P_Hsec IN USE	(ISR_1100_4P_Hsec)	0 NOT

Reload the router to enforce the license